 
 


TOSHIBA

 
 
 
 **gigabeat P** Series

Safety Precautions



Be sure to read the Safety Precautions carefully before using your gigabeat Digital Audio Player to ensure correct use of the product.

©TOSHIBA CORPORATION 2006

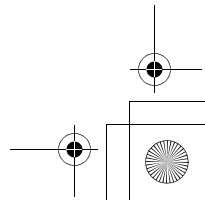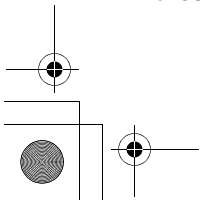

Safety Precautions

Safety icons

This manual contains safety instructions that must be observed in order to avoid potential hazards that could result in personal injuries, damage to your equipment, or loss of data. These safety cautions have been classified according to the seriousness of the risk, and the icons highlight these instructions as follows:

- | | |
|------------------|---|
| ▲ WARNING | Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury. |
| ▲ CAUTION | Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. |
| CAUTION | Indicates a potentially hazardous situation which, if not avoided, may result in property damage. |
| NOTE | Provides important information. |

Precautions for Use

▲ WARNING Should you notice any abnormality such as odor, smoke, or overheating, disconnect the USB cable and turn off the power. Continuing to use the product may result in fire or burn, possibly resulting in serious injury.

▲ WARNING If water or other foreign objects should enter the equipment, disconnect the USB cable and turn off the power. Continuing to use the product may result in fire, possibly resulting in serious injury.

▲ WARNING If you have dropped the product or damaged the product case, disconnect the USB cable and turn off the power. Continuing to use the product may result in fire, possibly resulting in serious injury.

▲ WARNING Do not disassemble, modify or repair the product. It may result in fire, possibly resulting in serious injury.

▲ WARNING Do not cause metals to contact the product or any inflammable objects to enter the product. Do not cause foreign objects to enter or drop into the holes in the terminals and other openings or gaps. It may result in fire, possibly resulting in serious injury.

▲ WARNING

Turn off the power and refrain from using the product on an airplane, in a hospital or other place where use of the product is prohibited. Using the product in these places may affect systems of operation, the functioning of medical equipment, resulting in an accident and possibly serious injury.

▲ WARNING

Do not use the product in a place that is exposed to water. Doing so may result in fire, possibly resulting in serious injury. Be particularly cautious when using the product in rain, snow or on beach or other waterfront area.

▲ WARNING

Do not use the product in a bathroom or shower. Doing so may result in fire, possibly resulting in serious injury.

▲ WARNING

Do not operate the product while walking, driving a car, or riding a motorcycle. You may fall or cause a traffic accident, possibly resulting in serious injury. You cannot hear sounds from the surrounding environment, which may lead to an unexpected accident, possibly resulting in serious injury.

▲ WARNING

Be careful not to let a small child play with the plastic bag used to wrap the product. The child may place the bag over his/her head or swallow it, resulting in suffocation.

▲ WARNING

Should you notice leaking fluid or odor from the product, immediately move it away from any source of fire. The fluid from the product is leaking from the built-in battery. In the event of battery leakage, the fluid may ignite and cause explosion, possibly resulting in serious injury.

▲ WARNING

Do not charge the built-in battery other than by the specified method. Doing so may result in fire or explosion, possibly resulting in serious injury.

▲ WARNING

Do not charge or discharge the product near fire or under the hot sun. The built-in battery may leak, resulting in ignition or explosion, possibly resulting in serious injury.

▲ WARNING

Do not use the product in a humid or steamy environment, nor use it in a place that is dusty or subject to lamp soot. Doing so may result in fire, possibly resulting in serious injury.

▲ WARNING

Disconnect the USB cable before moving the product. Failure to do so may damage the cables, resulting in fire, possibly resulting in serious injury.

▲ WARNING

Do not play the supplied CD-ROM on a music CD player. Doing so may damage the headphones or speaker or injure your ears, possibly resulting in serious injury.

▲ WARNING

Should you discover leakage from the product, do not touch the fluid. The leakage from the product is fluid from the built-in battery. If battery fluid should enter the eye or contact the skin, eye injury or skin damage may result. If battery fluid should enter your eye, rinse thoroughly with clean water and seek immediate medical advice. If battery fluid should adhere to your skin or clothes, immediately rinse it away with clean water.

▲ WARNING

Do not place the product in a hot place. Placing the product under direct sunlight, in a closed car, near a stove, etc., may result in heat generation or fire, possibly resulting in serious injury. The product may also break possibly resulting in serious injury.

▲ WARNING

Do not subject the display surface to impact. Doing so may result in a damaged display, broken glass or leaking fluid possibly resulting in serious injury. If fluid should enter your eye or adhere to your body or clothes, immediately rinse it away with clean water. If fluid should come in contact with your eye, rinse with clear water and seek immediate medical advice from a doctor.

▲ WARNING

Store the product in a place out of the reach of small children. Failure to do so may result in injury or accident.

▲ WARNING

Do not place the product on, or cover it with, a cloth or cushion. The buildup of heat may cause the top panel to deform or result in fire possibly resulting in serious injury. Use the product in a well-ventilated place.

▲ WARNING

Do not drop the product or subject it to strong impact. The product may be damaged, or fire may result, possibly resulting in serious injury.

▲ CAUTION

Do not swing the product around when transporting or carrying it. The product may strike a person or object, resulting in injury.

▲ CAUTION

If you should experience an abnormal sensation on your skin, immediately stop using the product and consult a dermatologist. In rare occasions the materials or surface treatments used in this product may cause itchiness, rash, eczema, etc., depending on the user's physical constitution or health condition.

▲ CAUTION

When using the headphones, be careful not to listen at excessive volume. Listening to very loud sound levels may adversely affect hearing ability.

Handling the Product

CAUTION

- Do not subject the product to strong impact, as it may damage the product or destroy the recorded data. It may also cause other failures and malfunctions.
- Do not apply unnecessary force to the product's display surface, as it may damage the display.
- Placing the product in a bag along with hard objects may damage the product in the event of contact with those objects.
- Do not spray insecticide or apply other volatile chemicals on or around the product. Also, avoid keeping a rubber or PVC product in contact with the product for a long period. The surface colour may change or the exterior coating may peel off.
- Do not place the product in a trouser pocket, etc. When you sit down, the product may receive strong impact and sustain damage.
- Do not forcibly press in the Plus Touch™. A strong force will be exerted on the internal parts and may damage them, or cause malfunction and failure.

Location of Use

NOTE

Using this product near a radio, television, cellular phone, etc., may cause radio interference. If interference should occur, move the product away from such appliances/ devices.

Condensation

CAUTION

Water droplets may form on the surface of the product after the product has been carried into a warm place directly from a cold place or when a cold room where the product is used is heated quickly. In such cases, water droplets may also be present inside the product, so do not turn on the power but wait for approximately one hour. Failure to do so may result in damage, malfunction or loss of recorded data.

Cleaning the Product

To clean the exterior, wipe it gently with a soft cloth.

CAUTION

Never use benzine or thinner, as it may cause discolouration or damage to the finish.

NOTE

When using a chemical cleaning cloth, follow the instructions for the cleaning cloth you're using.

Music CD's

Use a disc that has the mark on the  disc label surface. When discs that fall outside of the CD standard are used, stable playback and optimum sound quality cannot be guaranteed.

Software Upgrades

Upgrades of the software may become available to enhance use after the product has been shipped.

Built-in Battery

 
 
 
 
- The built-in battery will gradually discharge, even when the product is not being used. If the product is not used for a prolonged period, the built-in battery may discharge completely. If this should happen, recharge the battery before using the product.
- The recharging time will vary depending on the condition of the built-in battery, ambient temperature, etc.
- Using the product at low temperatures will shorten the continuous playback time.
- The built-in battery can be recharged approximately 500 times. (This number is an estimate and is for reference purposes only.)
- The built-in battery is a consumable part. Repeated use will gradually decrease the operating time. If the battery is consumed quickly after a full charge, the built-in battery may have failed. Please contact TOSHIBA Customer Service by calling (Phone # on "QUICK START GUIDE").

NOTE



TOSHIBA shall not be liable whatsoever for any corruption or loss of stored data due to the complete discharge of the built-in battery.

Precautions Concerning Data Deletion at the Time of Disposal or Transfer

- This gigabeat contains built-in flash memory. When the gigabeat is disposed of or sold with the flash memory in an as used condition, information on the hard disk may be viewed by a third party. When disposing of or reselling the gigabeat, please delete all of the data on the flash memory.

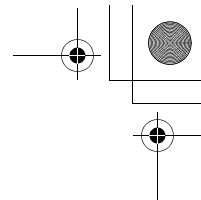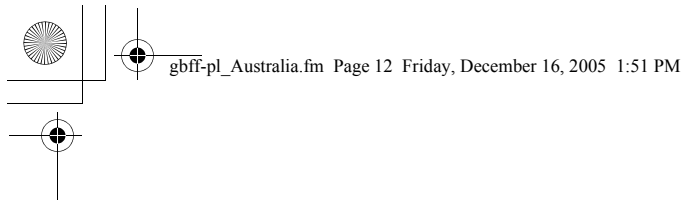

TOSHIBA

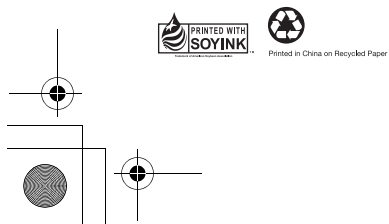  

Printed in China

